



Custom Dynamics® ProBEAM® Dynamic Strips™ LED Turn Signals Installation Instructions

We thank you for purchasing the Custom Dynamics® ProBEAM® Dynamic Strips™ LED Turn Signals! Our LEDs offer maintenance free service and higher visibility. Our ProBEAM® product line utilizes the latest technology and automotive grade components to ensure the highest level of reliable service. Custom Dynamics® offers one of the best warranty programs and customer support in the industry. If you have any questions during the installation of this product please call us at 1(800) 382-1388.

Part Numbers:

PB-DS2-14-B (Black)
PB-DS2-14-C (Chrome)
PB-DS2-14-CON (Contrast Cut)

Package Contents:

- ProBEAM® Dynamic Strips™ (pair)
- 4" Black Tie Wraps (8)
- 5/16"x 1-1/4" Button Head Bolt(4)
- Finished Flat Washer (4)

Fitment: 2014-2024 Harley-Davidson® Ultra Limited (FLHTK), 2014-2023 Street Glide (FLHX), Street Glide Special (FLHXS), 2022-2023 Street Glide ST (FLHXST), 2015-2022 CVO™ Street Glide (FLHXSE), 2019-2022 Electra Glide Standard (FLHT), 2014-2019 Electra Glide Ultra Classic (FLHTCU), 2015-2016 Ultra Classic Lo (FLHTCUL), 2015-2018 Ultra Limited Lo (FLHTKL), 2014-2021 CVO™ Limited (FLHTKSE), 2014-2024 Tri Glide (FLHTCUTG) and 2020-2022 CVO™ Tri Glide (FLHTCUTGSE).

2014-2024 Harley-Davidson® Ultra Limited (FLHTK), 2014-2019 Electra Glide Ultra Classic (FLHTCU), 2015-2016 Ultra Classic Lo (FLHTCUL), 2015-2018 Ultra Limited Lo (FLHTKL), 2014-2021 CVO™ Limited (FLHTKSE), 2014-2024 Tri Glide (FLHTCUTG) and 2020-2022 CVO™ Tri Glide (FLHTCUTGSE) require OEM passing lamps to be removed.



ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Cleaning: Take special care in cleaning the finish. Use only a non-abrasive cleaner and a fine microfiber cloth to remove dirt or debris. Never use abrasive polishes or cleaners as these can scratch the finish.



Installation:

1. Remove the 1/2" nuts that secure the turn signal assembly to the fork shown in Picture 1. Pull assembly away from the fork to reveal the black wiring connector as shown in Picture 2.




2. Unplug the connector by pushing in on the tab located on the male side of the connection as shown in Picture 3. Push the tab and pull apart both sides at the same time. Remove the turn signal assembly from the bike completely.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

2

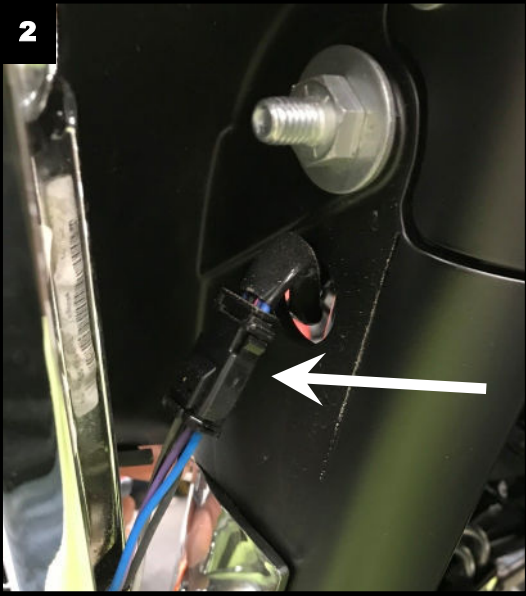

3. Remove the mounting studs on the fork with a 9/16" wrench or deep well socket.
4. Repeat steps 1 through 3 on the opposing side turn signal assembly.
5. Plug in the male connector of the of the ProBEAM® Dynamic Strips™ harness into female connector on the turn signal factory wiring harness.
6. Push the tun signal connectors into the hole in the fork frame
7. Install the ProBEAM® Dynamic Strips™ onto the fork frame and secure with the provided 5/16" button head bolts and washers. The LEDs should be on the bottom of the ProBeam® Dynamic Strips™ when mounted to the fork. Repeat step for the opposing side.
8. Run the 4 way hazard flashers, with the ignition in the off position, for 3 minutes to sync BCM with the ProBEAM® Dynamic Strips™. After you have sync'd the BCM
9. Check all lighting for proper operation in all modes.

3

