



Wireless CarPlay Adapter Installation Guide 23.5 CVO and 2024+ Touring Models

Step 1 — Remove the Seat

Remove the motorcycle seat according to the manufacturer's procedure to access the wiring area beneath the seat.

Step 2 — Locate the Accessory Connector

Locate the accessory connector harness under the seat and identify the correct connector using the arrow labeled "Here" in the reference image below.

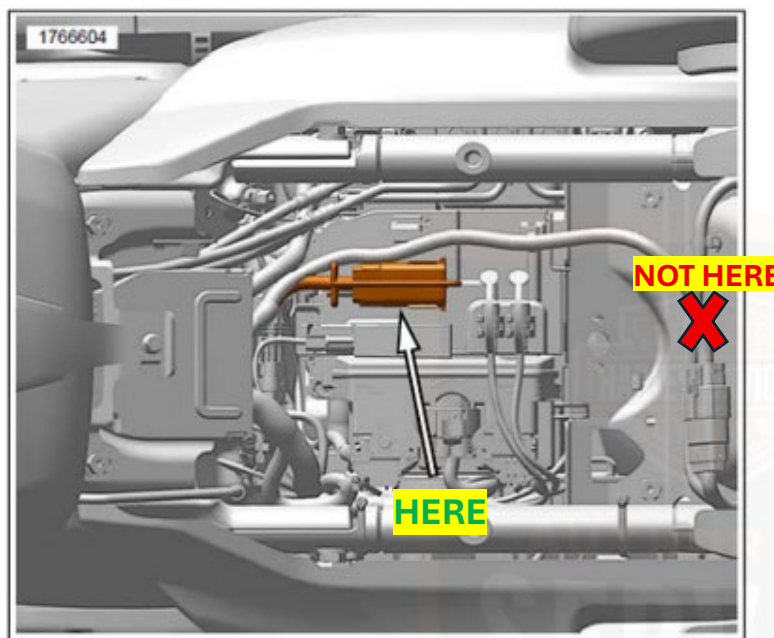


Figure 49. Accessory Connector (under seat)

Step 3 — Install the RickRak WCP Module

Remove the rubber protective plug from the accessory connector. Connect the RickRak WCP module and secure it safely under the seat.

Step 4 — Clear Existing Bluetooth Connections

Delete all previously paired devices from the motorcycle infotainment system **and** from your iPhone Bluetooth settings.

Step 5 — Pair the Infotainment System

Search for Bluetooth devices using the motorcycle infotainment system and connect to the RickRak WCP module.

Step 6 — Pair Your iPhone

Pair your iPhone to the motorcycle infotainment system and follow the on-screen prompts. Accept all permissions including Contacts Sync, Location Access, and Siri.

Important Notes

- Ensure your iPhone is updated to the latest iOS version.
- Confirm Apple CarPlay is enabled on your phone.
- Siri must be enabled for Apple CarPlay to function properly.
- If another accessory is already connected to the plug, an **HS-5515 Accessory Splitter** may be required. (Harness sold separately at www.RickRak.com.)